




How to measure a cylinder for your UPVC door:

1. First, if the cylinder projects from the handles, draw a line on the cylinder that is up against the handle.
2. Open the door, locate and remove the fixing screw. The fixing screw is in line with the cylinder and is a long machine screw threaded all the way down.
3. Insert the key and turn about 30°, gently pulling and the cylinder should slide out of the door.

NB - Sometimes the handle screws need to be slackened off to allow the cylinder to come out.

4. Make a note which end is on the outside of the door, this is Side B, as on the diagram below,
5. Measure in millimetres from either end to the screw fixing hole (or from the line you have drawn on to the screw fixing hole) and write these sizes down.

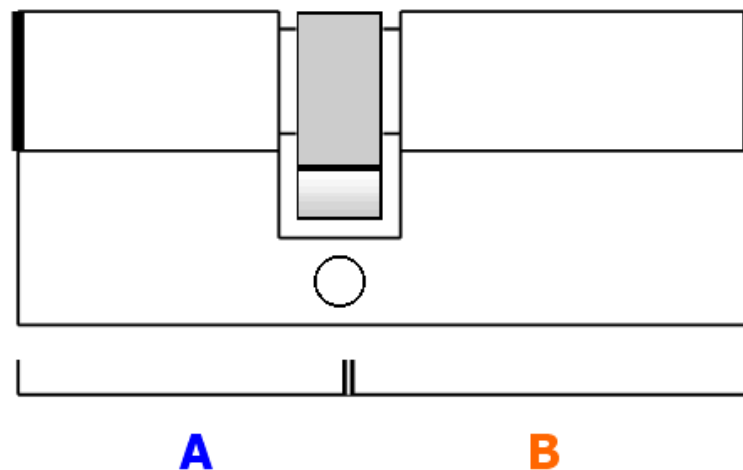

e.g. the cylinder could measure 95mm overall, with 40mm on the inside and 55mm on the outside and would be called a "40/55"

6. to refit, follow steps 3 and 2